



**iTAKSi**

**M12 TAXIMETER**

**USER GUIDE**

This document provides information to assist in the users. Alberen Electronics Limited reserve the right to change the specification of its products without notice. If any further information is required, please contact your local dealer!


**Issue 2. January 2016**

<b>CONTENTS</b>	<b>Page No</b>
1. VIEW.....	3
1.1. FRONT VIEW.....	3
1.2. REAR VIEW.....	3
2. CABLES.....	4
2.1. POWER CABLE.....	4
2.2. POWER CABLE WITH SECOND LAMP DRIVE .....	4
2.3. PRINTER CABLE.....	4
3. KEY FUNCTIONS.....	5
4. SOME SCREEN EXPRESSIONS WHILE THE TAXIMETER IS ON.....	5
5. CHARACTER TABLE.....	5
6. OPENING THE TAXIMETER .....	6
6.1. OPENING THE TAXIMETER AS ADMIN.....	6
7. DISPLAY TIME AND DATE.....	7
8. DISPLAY LAST FARE, METER MEASUREMENT AND SPEED .....	8
9. OPENING AND SELECTING THE TARIFF.....	8
9.1. TARIFF STRUCTURE.....	9
9.2. ENTERING EXTRA FEE.....	11
10. CLOSING THE TARIFF.....	12
11. ENTERING MENU.....	12
11.1. MENU TABLE.....	12
12. CLOSING THE TAXIMETER.....	14
13. PRINTER CONNECTION.....	14
14. ROOF LAMP CONNECTION.....	15




## 2. CABLES

### 2.1. POWER CABLE

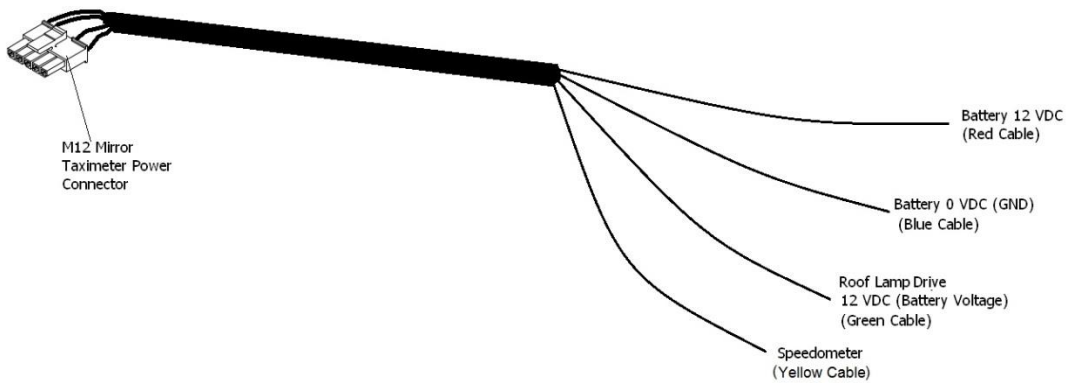



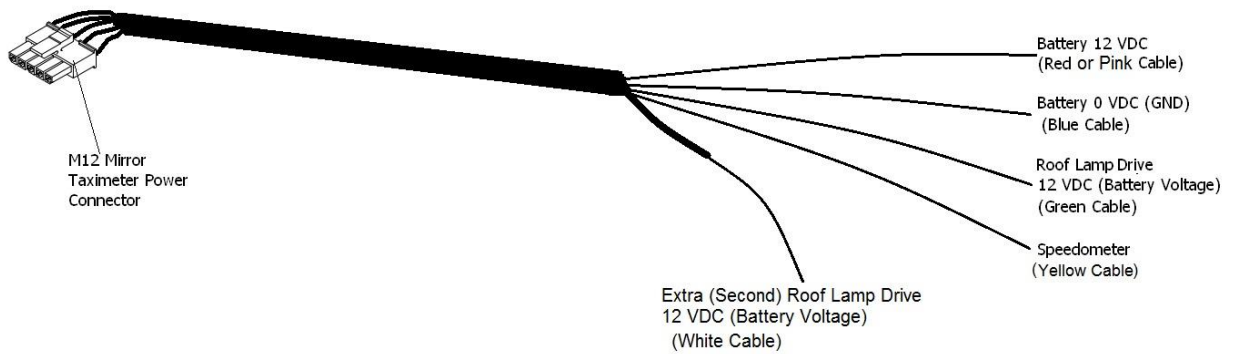


### 2.2. POWER CABLE WITH SECOND LAMP DRIVE



### 2.3. PRINTER CABLE



### 3. KEY FUNCTIONS

Keys	In mode "FOR HIRE"	In mode "HIRED"	While browsing in the menu	While changing parameters
	Starts the tariff	Select different tariff	Starts the tariff	Scroll digit
	Show time and date in three different format	Stop the tariff	Change to the next menu parameter	Increment digit
	Show last fare, meter counting, speed	Pass to mode "FOR HIRE"	Change to the previous parameter	Decrement digit
	Enter menu	Increment extra fee	Pass to sub menu	Confirm the changes
	Cancel time, date, or speed showing	Cancel extra fee entered	Pass to the top menu	

### 4. SOME SCREEN EXPRESSIONS WHILE THE TAXIMETER IS ON

ENGLISH	EXPLANATION
FOR HIRE	
HIRED 1,2,3,...	HIRED Mode
STOPPED	Payment-Fare position (Total Fare)
EXTRA	while there are extra fare in the top screen

### 5. CHARACTER TABLE

Space	Space
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

? (Ö)	ö
@ (Ü)	ü
A	À
B	ß
C	Ç
D	Ð
E	É
F	ƒ
G	ƒ
H	h
I	ı


J	Ĵ
K	Ʒ
L	Ł
M	ñ
N	ñ
O	o
P	Ɔ
Q	q
R	ƚ
S	Ɔ
T	ƚ


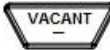
U	U
V	v
W	ŵ
X	Ɔ
Y	Ɔ
Z	Ɔ

## 6. OPENING THE TAXIMETER


While the taximeter is turned off (there is no text on the screen);


If it is pressed to any key of the taximeter, driver selection menu is shown in upper screen. Also shift number is shown in lower screen. When each taximeter is closed and opened, shift number is incremented.

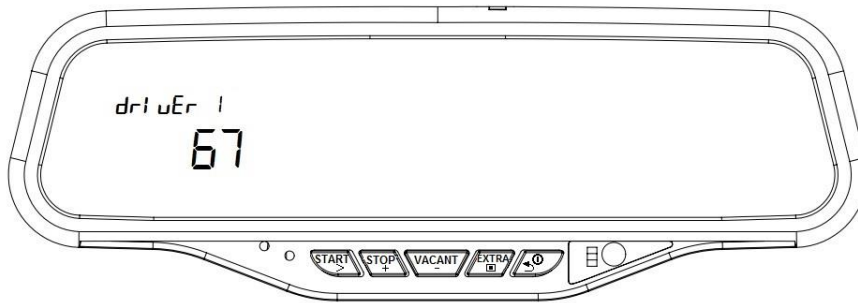





The driver can be changed by pressing  or .

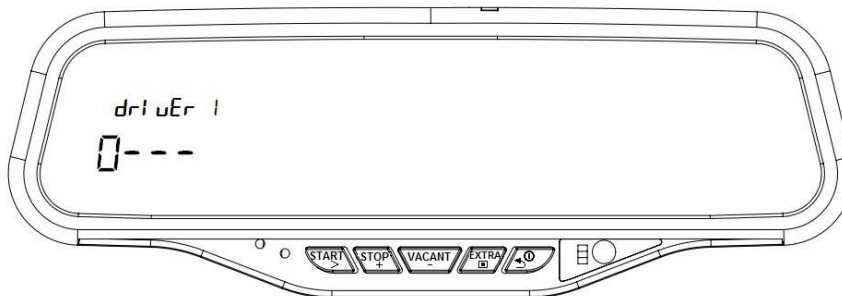There are 3 different users (drivers) in the taximeter. 4. User is admin. Separate records for every 3 drivers are saved. Fourth user-admin can see all records.

Later, if any password is entered for the drivers, the password menu is shown in the screen after pressed  button.



4-digit password is entered using ,  and  buttons. Later, the taximeter is opened pressing  button.


### 6.1. OPENING THE TAXIMETER AS ADMIN

Fourth user of the taximeter is admin. When taximeter is opened as admin, the tariff is not opened.

It can be seen all revenue records of the 3 different drivers by admin. This records can be printed by admin. Also they can be erased by admin.


Drivers and admin passwords can be changed by admin.


## 7. DISPLAY SHIFT NUMBER


In FOR HIRE position when pressed  button, taximeter shows shift number. When each taximeter is closed and opened, shift number is incremented.


## 8. DISPLAY TIME AND DATE

There are three formats for showing time-date in the taxi meter:


When  button is pressed once in the “FOR HIRE position, time is shown in the upper screen as at the below.

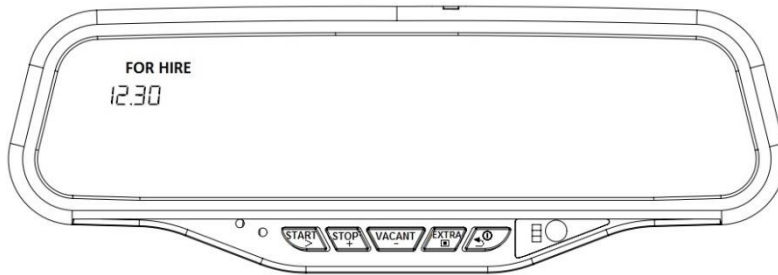

When  button is pressed a second time.

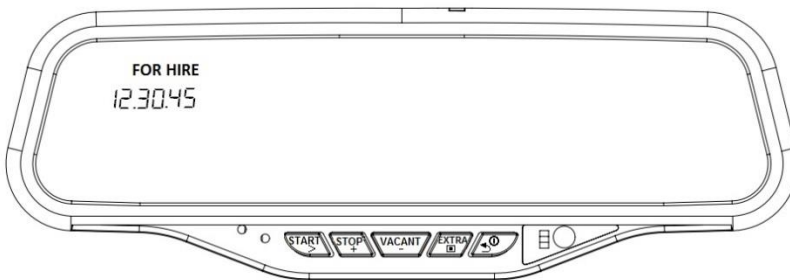


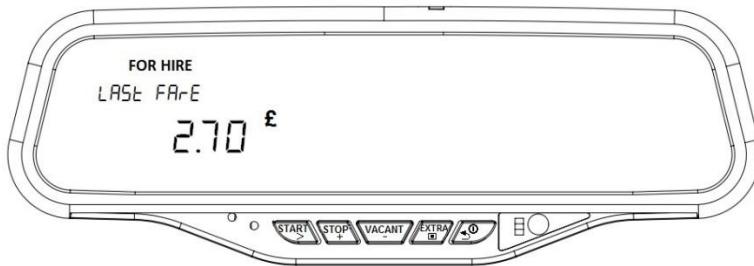
Lastly, when  button is pressed a third time.

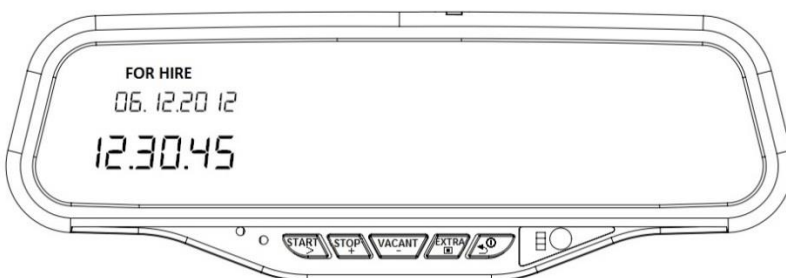



If the taximeter doesn't receive speed signal, the time-date information remains in the screen for 60 seconds.

## 9. DISPLAY LAST FARE, METER MEASUREMENT AND SPEED


When  button is pressed firstly in the “FOR HIRE position, fare of the last trip is shown in the sub screen as at the below.

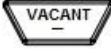

Press again  button, meter measurement is shown in the screen as at the below. When vehicle moved, counter starts to count in meters.

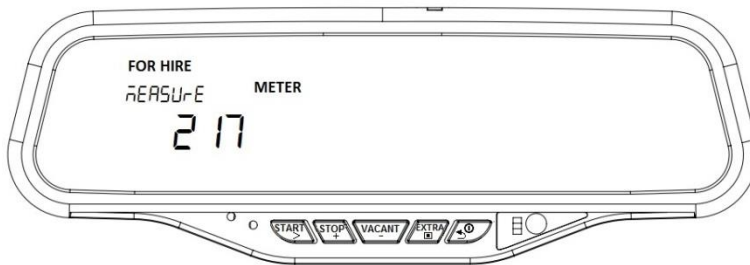


Press again  button, speed of the vehicle is shown in the screen as at the below.

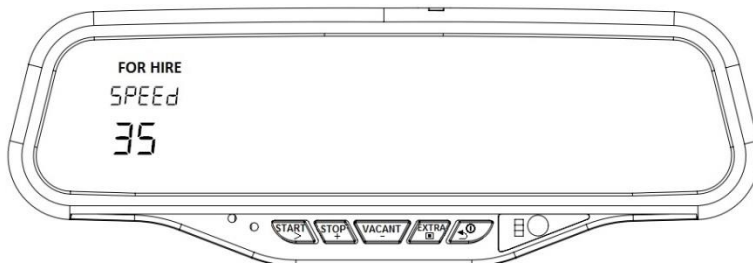


If the taximeter doesn't receive speed signal, the speed remains in the screen for 60 seconds


## 10. OPENING AND SELECTING THE TARIFF

When it is pressed to  button first time in the “FOR HIRE” position, the Tariff 1 is opened from the initial charge of Tariff 1 and the taximeter starts to calculate time and distance.



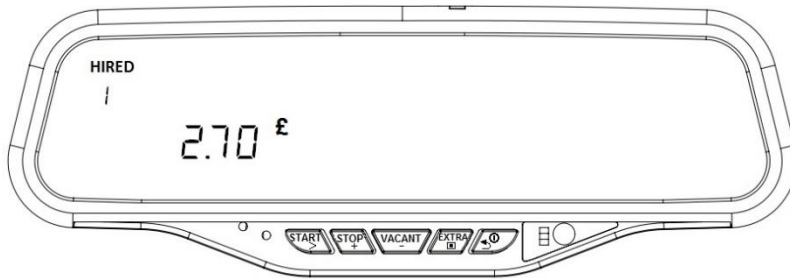

While the tariff is open, the tariff can be changed between loaded tariffs in 50 meters distance.

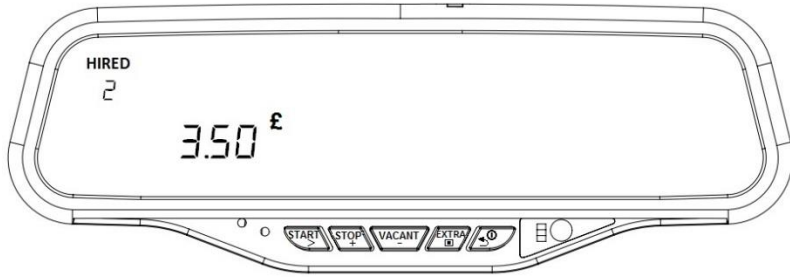

### 10.1. TARIFF STRUCTURE

More than 30 tariffs can be loaded to M12 Mirror Taximeter. Also the automatic change of tariffs can be triggered by the distance, duration and fare. You can see the tariff data at the table below.

<b>M12 Taximeter tariff information</b>		
<p>The period of validity loaded tariff depends tariff type. All detailed tariff information can be shown on print out. Only information of the active tariffs can be shown on the taximeter screen at that moment. There are three types of the tariffs: Normal (N), Daily (D), Weekly (W)                      The tariffs can be set according to specific date range periodically for every year: (HN), (HD), (HW)                      Tariffs can be set according to specific date range: (SN), (SD), (SW)                      Date-time formats of tariff validity duration are shown at the table</p>		
<b>Tariff date-time types</b>	<b>Date-time formats</b>	<b>Explanation</b>
Normal (N)	ALL YEAR ALL TIME	All Year, All Time
Daily (D)	ALL YEAR HH:MM-HH:MM	All Year, Specific time interval
Weekly (W)	ALL YEAR MON HH:MM-HH:MM TUE HH:MM-HH:MM WED HH:MM-HH:MM .....	All Year, Specific time of the week days
Holiday Normal	START DD/MM HH:MM	Specific Date Interval for every year, start

(HN)	END DD/MM HH:MM	time of first day and end time of last day
Holiday Daily (HD)	DATE DD/MM-DD/MM TIME HH:MM-HH:MM	Specific Date Interval for every year, Specific time interval
Holiday Weekly (HW)	DATE DD/MM-DD/MM MON HH:MM-HH:MM TUE HH:MM-HH:MM WED HH:MM-HH:MM .....	Specific Date Interval for every year, Specific time of the week days
Specific Normal (SN)	START DD/MM/YY HH:MM END DD/MM/YY HH:MM	Specific Date Interval, start time of first day and end time of last day
Specific Daily (SD)	DATE DD/MM/YY - DD/MM/YY TIME HH:MM-HH:MM	Specific Date Interval, Specific time interval
Specific Weekly (SW)	DATE DD/MM/YY - DD/MM/YY MON HH:MM-HH:MM TUE HH:MM-HH:MM WED HH:MM-HH:MM .....	Specific Date Interval, , Specific time of the week days
<p><b>HH:</b> Hour Hour, <b>MM:</b> Minute Minute, <b>MM:</b> Month Month, <b>DD:</b> Day Day, <b>YY:</b> Year Year                  If the “start time” bigger than “end time” in the daily and weekly tariffs, it’s mean: 00:00 to End Time                  and Start Time to 23:59</p>		

Tariff Parameters	Tariff 1	Tariff 2	Tariff 3	.....	Tariff 40
Init Charge (p)					
Init Distance (yard/10)					
Init Duration (second/16)					
Unit distance(yard/100)					
Unit time (second/64)					
Unit distance fare (p/10)					
Unit time fare (p/10)					
Unit extra fare (p/10)					


Tariffs which changed automatically as depends <u>distance</u> of the journey					
	Tariff 1	Tariff 2	Tariff 3	.....	Tariff 16
Limit distance (yard)					
Unit distance or unit distance fare (yard/100 or p/10)					
Unit time or unit time fare (second/64 or p/10)					

Tariffs which changed automatically as depends <u>duration</u> of the journey					
	Tariff 1	Tariff 2	Tariff 3	.....	Tariff 8

Limit duration(second)					
Unit distance or unit distance fare(yard/100 or p/10)					
Unit time or unit time fare (second/64 or p/10)					
<b>Tariffs which changed automatically as depends <u>fare amount</u> in the journey</b>					
	<i>Tariff 1</i>	<i>Tariff 2</i>	<i>Tariff 3</i>	.....	<i>Tariff 8</i>
Limit fare amount(p/10)					
Unit distance or unit distance fare(yard/100 or p/10)					
Unit time or unit time fare (second/64 or p/10)					
<b>Tariffs which changed automatically as depends <u>speed exceeding</u> in the journey</b>					
	<i>Tariff 1</i>	<i>Tariff 2</i>	<i>Tariff 3</i>	.....	<i>Tariff 8</i>
Limit Speed (mph)					
Sub Limit of the speed exceeding duration (Second)					
Unit distance or unit distance fare(yard/100 or p/10)					
Unit time or unit time fare (second/64 or p/10)					

### 10.2. ENTERING EXTRA FEE


While the tariff is open, the extra fee is entered to upper screen by pressing extra button repeatedly.

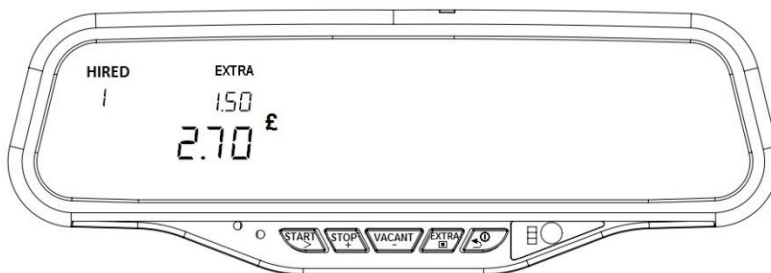



When it is pressed to extra button, extra fee is increased up to unit extra fee which loaded to the taximeter.


## 11. CLOSING THE TARIFF



After the tariff is opened;

It should be pressed  button firstly to close the tariff. So, total fare is shown sub screen as shown below.

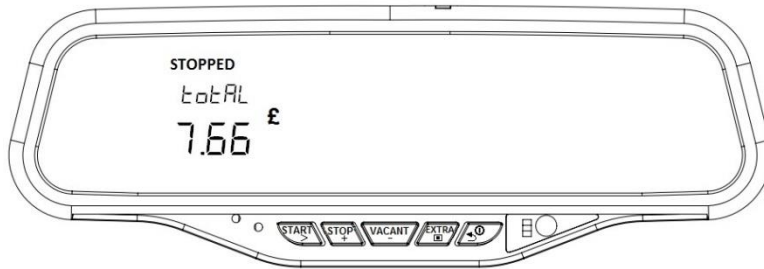

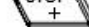If a printer is connected to the taximeter, it can be selected "Print" by pressing  button again as shown below.

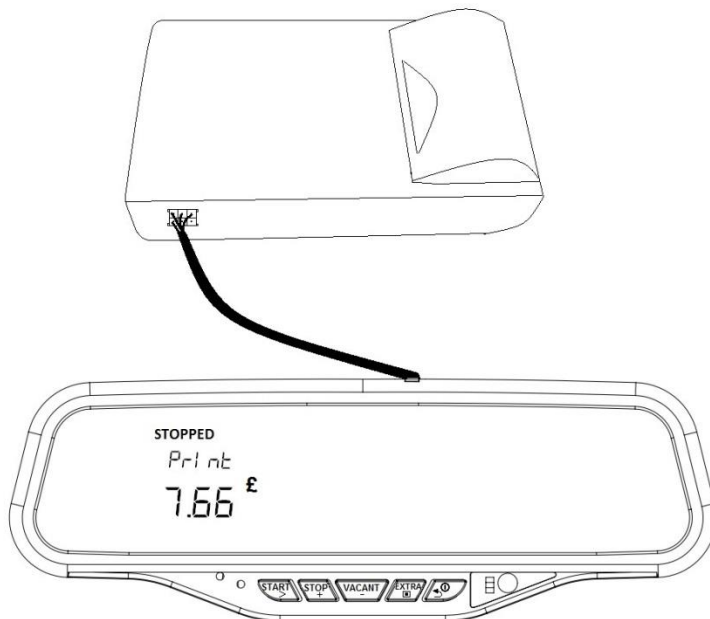

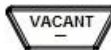After selected "Print" or "total", pressed  button. If 10 seconds have passed after  button pressed, the taximeter will pass to the "FOR HIRE" position. Otherwise, taximeter waits for 10 seconds in the "FARE" position. If selected *Print*, the printer prints a receipt.

## 12. ENTERING MENU

It can be reached to the menu by pressing  button in the "FOR HIRE" position. All information (as counters, setting parameters, etc) are shown in menu.

Structure of the menu is shown in menu table at the below.


## 12.1. MENU TABLE

MAIN MENU	1.SUB MENU	2.SUB MENU	3.SUB MENU	4.SUB MENU		
<b>rEuEnUES</b> Revenues	<b>dri uEr 1</b> Driver 1	<b>tot di St</b> Total distance (km)	If the taximeter is opened as Driver 1, Driver 2 or Driver 3; passing 1.SUB MENU (DRIVER 1, DRIVER , DRIVER 3 menu), directly reached to 2.SUB MENU (TOT DIST, HIRED DIST,... menu) of the driver. Counters can be printed if a printer connected.			
		<b>hi rEd dt</b> Hired distance (km)				
		<b>CUStoñ n</b> Custom number				
		<b>EHtRA FA</b> Total Extra Fare				
		<b>tot FArE</b> Total Fare				
		<b>PrI nt</b> Print the info				
		<b>drur Pūd</b> Driver Password	<b>oLd Pūrd</b> Old password	<b>nEū Pūrd</b> New password		
	<b>dri uEr 2</b> Driver 2	If the taximeter has opened as administrator or entered to the menu with SETUP DEVICE, it is not asked old password. Also in this case, print out of the counters is printed for 3 drivers separately				
	<b>dri uEr 3</b> Driver 3					
		<b>Adñl n</b> Administrator	<b>drur Pūd</b> Driver Password	<b>nEū PErd</b> New Pwrđ		
	<b>uhC di St</b> Total Vehicle Km (Taximeter odometer) <b>0 KM</b>					
	<b>ErAS rEu</b> Erase Revenues	<b>ErASE</b> Erase!!!	All revenues information are erased			
<b>tAXI I nF</b> Taxi Information	<b>tI ñE</b> Time		Maximum last 20 records are stored about Constant k (constant k value, date of change and setup device number)  These parameters can be changed using only the Setup Device.  These parameters can be change by users  All taxi information parameters can be printed if a printer connected			
	<b>dAtE</b> Date					
	<b>ConSt 20</b> Constant k	<b>dAtE 20</b> date of change of constant k			<b>dEuCE 20</b> Setup Device number	<b>ConSt 19</b> .....
	<b>rE9-ul n</b> Vehicle registration number					
	<b>LI CEñCE</b> Taxi licence number					
	<b>SErI AL n</b> Taximeter Serial Number					
	<b>EHtR Y-n</b> Permission for entering extra fee (Yes-No)					
	<b>tI ñE Y-n</b> Permission of time setting (Yes-No)					
	<b>ñtRF Y-n</b> Multi tariff at the same time (Yes-No)					
	<b>SūCh Y-n</b> Automatic switching Tariff 1 to Tariff 2 (Yes-No)					
	<b>LI 9ht on</b> Time of the light on for roof lamp					
	<b>LI 9htOFF</b> Time of the light off for roof lamp					
	<b>PrI nt</b> Print the information					
<b>tRF I nFo</b> Tariff Information	<b>tARIF 1</b> Tariff 1	<b>I nI t Chr</b> Initial charge	While a limit meter values are shown at the upper display for auto distance tariffs, unit distance or unit distance fare values are shown at the lower display.			
		<b>I nI t di S</b> Initial distance				
		<b>I nI t tI ñ</b> Initial time				
		<b>UnI t di S</b> Unit distance				
		<b>UnI t tI ñ</b> Unit Time				
		<b>Unk d FA</b> Unit distance fare				
		<b>Unk t FA</b> Unit time fare				
		<b>Unk EH F</b> Unit extra fare				
		<b>B00-</b> Sample limit meter value for auto distance tariffs				
		<b>PrI nt</b> Print Information				
	All tariff information (tariff 1,2,3, ) can be					

					printed if a printer connected	14
	<b>TA R I F 2</b>	Tariff 2				
	<b>TA R I F 3</b>	Tariff 3				
	.....					
	<b>TA R I F 10</b>	Tariff 10				
	<b>CR C 20</b> Tariff Checksum (CRC)	<b>DA TE 20</b> Tariff Installation date	<b>SE TUP 20</b> Setup Device number	<b>CR C 19</b>	.....	The CRC code for all tariff parameters is shown. Maximum last 20 records are stored about tariff information (CRC of the tariff, date of change and setup device number)
<b>PR I N T E R</b> Printer Reports	<b>DA I LY R P</b>	Daily Report				
	<b>CO U N T E R R</b>	Total Counter	Report			
	<b>DE TA I L E D</b>	Totals Report for past days (Maybe last 30 days)				
<b>M E A S U R E</b> Distance and Time Test	Time (unit: 0.5 second) on the top screen. Pulse counter on the sub screen					
<b>V E R S I O N</b> Software Information	<b>NO 120567</b>	Setu Device Number				At the upper screen, it is shown Setup Device Number which has changed the parameters as date, constant k, etc. Software Version is shown at the lower display.
	<b>V 1-02</b>	Software Version				


### 13.CLOSING THE TAXIMETER

In FOR HIRE position when pressed  button, taximeter firstly shows shift number.

To close the taximeter, it is pressed to  button minimum 2 seconds while in the “FOR HIRE” position. While the taximeter is closed, when pressed any button, it passes to driver selection menu


### 14. PRINTER CONNECTION

The Printer Cable is connected to Printer and printer connector of the taximeter. The printer gets power from the taximeter via printer cable.

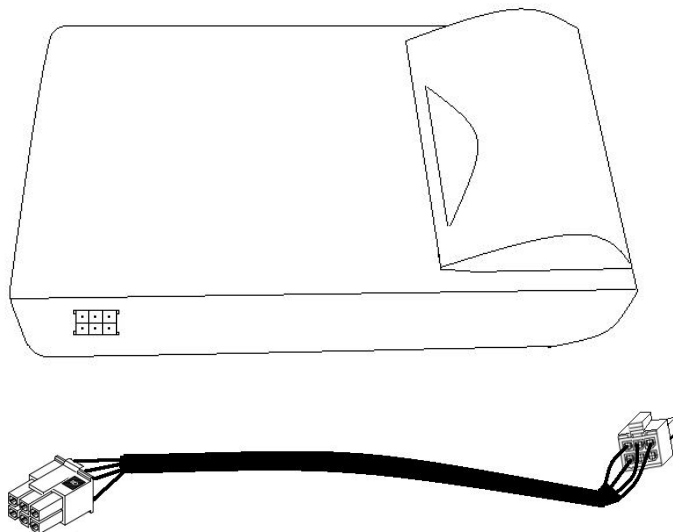

Printer Cable

Both connector of the printer cable are same. One end of the cable connected to the taximeter and other end connected to the printer

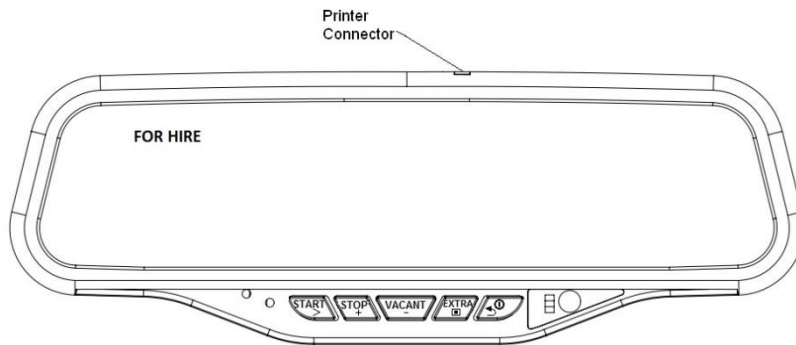

## 15. ROOF LAMP CONNECTION

The green cable of the power cable is connected to the positive pole of the roof lamp, other ground pole of the roof lamp is connected chassis of the vehicle.

If a second roof lamp will be connected to taximeter; then “Power Cable with Second Lamp Drive” cable should be used as power cable. Second lamp can be used for “STOPPED” or a different position. The white cable of the power cable is connected to the positive pole of the second roof lamp.